GOOD TO KNOW – ABOUT OUR TECHNICAL DEVICES

APARTMENT 1

Contents

I. TV user's manual
II. TV channel list
III. Air conditioner user's manual
IV. Hot plate user's manual
V. RGB LED lights user's manual
VI. Spring-loaded roller shades user's manual
VII. Radiator thermostat user's manual
VIII. Useful phone numbers

PREMIUM APARTMENTS
KECSKEMÉT

03 The Samsung Smart Remote

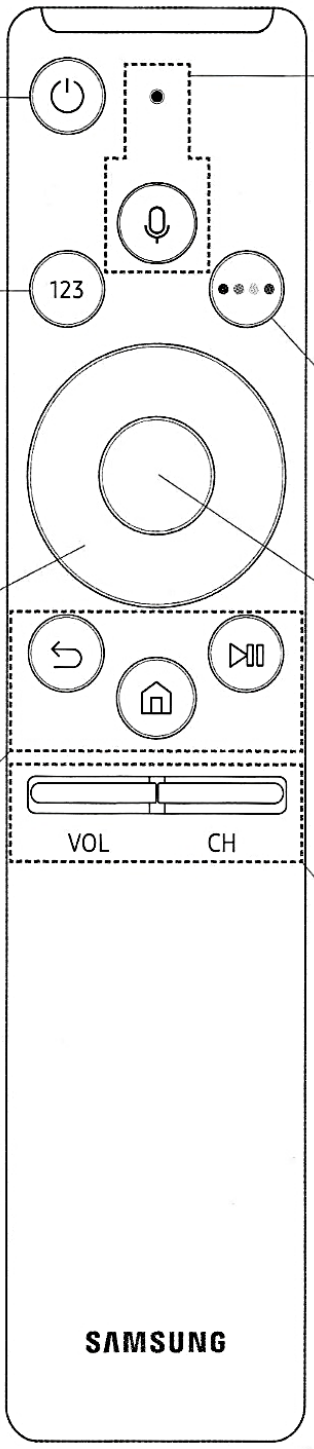

(Power)
Press to turn the TV on or off.

(Number pad)
When pressed, a number strip appears on the bottom of the screen. Select numbers and then select **Done** to enter a numeric value. Use to change the channel, enter a PIN, enter a ZIP code, etc.

- When pressed for 1 second or more, the TTX menu appears.

Directional pad (up/down/left/right)
Moves the focus and changes the values seen on the TV's menu.

(Return)
Returns to the previous menu. When pressed for 1 second or more, the running function is terminated. When pressed while you are watching a programme, the previous channel appears.

(Play/pause)
When pressed, the playback controls appear. Using these controls, you can control the media content that is playing.

(Smart Hub)
Returns to the Home Screen.

(Voice Interaction)
Runs **Voice Interaction**. Press the button, say a voice command, and then release the button to run Voice Interaction. When pressed once, the guide to **Voice Interaction** appears.

- The supported voice interaction languages and features may differ by geographical region.

4 Colour buttons
Use these coloured buttons to access additional options specific to the feature in use.

Select
Selects or runs a focused item. When pressed while you are watching content, detailed programme information appears. When pressed again, you can select or run any of the functions displayed.

VOL (Volume)
Move the button up or down to adjust the volume. To mute the sound, press the button. When pressed for 1 second or more, the **Accessibility Shortcuts** menu appears.

CH (Channel)
Move the button up or down to change the channel. To see the **Guide** screen, press the button.

- When pressed for 1 second or more, the **Channel List** screen appears.

Switching between cable and satellite TV programs

Take the Samsung smart remote control into your hands, and push down the a CH (Channel) button for 2 seconds, than push once the right button ont the direction pad.

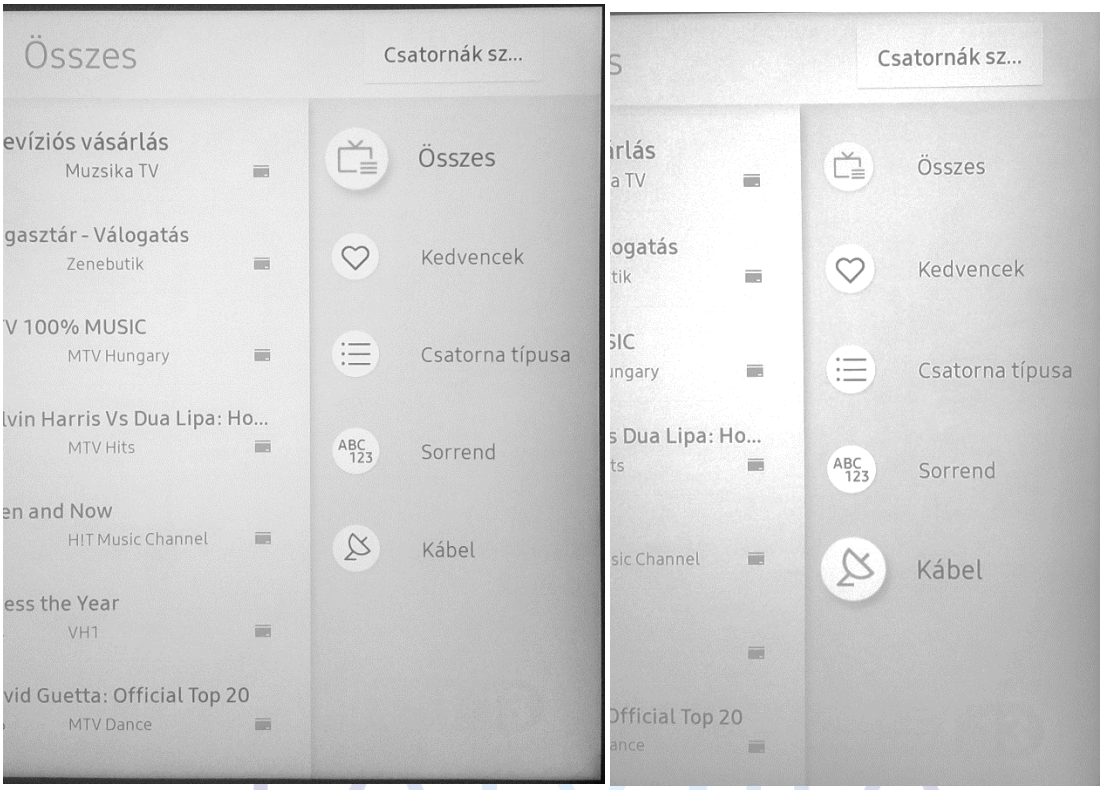

The bottom line of this menu shows the currently selected channel type. If you see that cable “Kábel” (as in the picture), you can access the cable channels if you see satellite “Műhold”, you can choose from the satellite channels. To switch, scroll down the direction panel to this menu item and press OK.

PREMIUM APARTMENTS
KECSKEMÉT

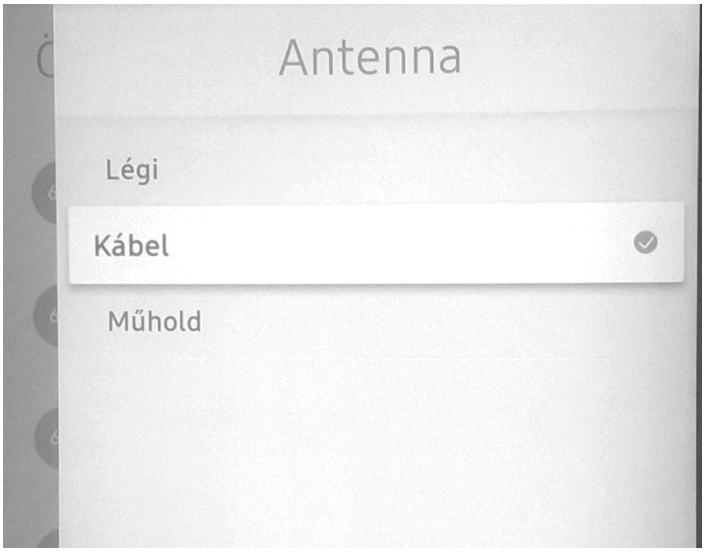

You can choose from three options: “Légi”=Air, “Kábel”=Cable and “Műhold”=Satellite mode. You can see a pipe next to the selected one. There is nothing in the Air, so we can move on and the other two can be chosen. Obviously, if you want to watch cable channels (mostly in Hungarian language), select the “Kábel” option and press the OK button if you want satellite TV (mostly in foreign languages), select “Műhold” and press OK.

TV program

Press the CH (Channel) button shortly to access the TV program.

Switch between TV broadcast, Internet and any other modes

On this Samsung smart device you can watch TV, use the Internet, Youtube and several other features.

To switch between features, press the button and then left and right step by step to see the possibilities. Choose which one you want to use and press OK.

Exit, go back

Step back in the Menu, exit from Menu or jump back to a previous TV channel use this button:

Pro tip:
You can also control the TV from your phone. Download an app (Samsung TV remote control) and follow the instructions to pair your phone with TV. When the phone finds the TV, click “Accept” on TV as well. It is labeld on screen, don't have to search in a separate menu.

(So if somebody finds this TV from another apartment, he can not control it, because You have to accept the request on this TV as well. And vice versa: if you find the TVs in Apartment 2 or 3, You won’t be able to control them unless They press OK there. ☺)

Please don’t forget to turn off the TV in case of leaving the apartment.

Thanks! ☺

PREMIUM APARTMENTS
KECSKEMÉT

II. TV CHANNEL LIST

Cable (Mostly in Hungarian)

Sorszám	Csatorna
1	Duna HD
2	Duna
3	M1 HD
4	M1
5	M2 HD
6	M2
7	M4 Sport HD
8	M4 Sport
9	M5 HD
10	M5
12	Duna World
13	Invitel ajánló csatorna
22	RTL Klub
24	TV2
26	RTL II
28	Super TV2
30	VIASAT3
32	Comedy Central
34	M3
36	RTL+
38	RTL Spike
40	VIASAT6
42	RTL Gold
44	Humor +
92	Hír TV
94	ATV
96	Echo TV
102	Discovery Channel
103	National Geographic HD
104	National Geographic
105	Nat Geo Wild HD
106	Nat Geo Wild
107	Spektrum HD
108	Spektrum
110	Travel Channel
111	HISTORY HD
112	History
114	Viasat History
116	OzoneTv
118	DoQ
120	Viasat Explore
122	Viasat Nature
124	Da Vinci
202	Cool TV
204	Film+
206	Mozi+
208	AXN
210	Prime
212	TV4
214	Story4
216	Paramount Channel
218	Sorozat+
220	AMC
224	Izaura TV
226	Film Café
228	Galaxy4
230	Comedy Central Family
232	Sony Max
234	Sony Movie Channel
236	Epic Drama
238	HBO
240	HBO2
242	HBO3
244	Cinemax
246	Cinemax 2
248	FilmBox
250	FilmBox Arthouse
251	FilmBox Extra HD
253	FilmBox Family
255	FilmBox Plus
257	FilmBox Premium
302	TLC
304	TV Paprika
306	LiChi TV
308	LifeTv
310	Spektrum Home
312	FEM3
314	Fine Living
316	Food Network
318	Fit TV
402	Nickelodeon
404	Minimax
406	Disney Channel
408	Nick Jr
410	Cartoon Network
412	Boomerang
414	Megamax
416	JimJam
418	Kiwi Tv
420	BabyTV
422	Duck TV
424	Smile of a Child TV
426	Kinder Kanal
502	Sport1
504	Sport2
506	Eurosport 1
508	Eurosport 2
510	Digi Sport 1
512	Digi Sport 2
514	Digi Sport 3
516	Spíler1 TV
518	Fishing and Hunting Channel
522	Motorsport TV
524	Havoc
526	Extreme Sports Channel
602	Sláger
604	Muzsika TV
606	Zenebutik
608	MTV Hungary
610	MTV Hits
612	H!T Music Channel
614	VH1
616	MTV Dance
618	MTV Music
621	MTV Rocks
623	Music Channel
625	TRACE URBAN
627	VH1 Classic

PREMIUM APARTMENTS

702	Arte
704	Deutche Welle
706	ProSieben
708	Sat 1
710	News 24
712	Al Jazeera
714	CNN
716	Sky news
718	Russia Today
720	RTR Planeta
722	Previj Kanal

724	TVP Polonia
726	Romania TV
728	TV5MONDE
730	Rai uno
732	TVE
734	NTDTV
802	Playboy Channel
804	Hustler
806	Dorcel
808	Brazzers TV Europe
810	Private TV

901	MR1 - Kossuth
902	MR2 - Petőfi
903	MR3 - Bartók
904	Dankó rádió
905	Rádió 1
906	Sláger FM
940	PAX TV
941	Bonum TV
942	Hatoscsatorna
943	D1 TV

Satellit (Mostly in foreign languages**)**

Program	Channel
1	tagesschau24
2	ONE
3	arte
4	PHOENIX
5	Test-R
6	ANIXE HD
7	QVC HD
8	HSE24 HD
9	SES 75
10	SOPHIA TV
11	Genius Plus
12	HSE24 EXTRA HD
13	1-2-3.tv HD
14	QVC2 HD
15	RADIOS
16	RADIOS ESP
17	LTC
18	PORTADA
19	BAJO DEMANDA
21	GUÍA
25	ALQUILER
26	ALQUILER
27	PORTADA
31	CONTRATO
32	TEST TÉCNICO
33	TEST_CSD1
34	TEST_CSD2
35	TEST_CSD3
36	TEST_CSD4
37	TEST_CSD5
45	GUÍA FÁCIL

46	rbb Brandenburg HD
47	rbb Berlin HD
48	MDR Sachsen HD
49	MDR S-Anhalt HD
50	MDR Thüringen HD
51	hr-fernsehen HD
53	eoTV
54	Zee One
55	Family TV
61	Zee One HD
62	Sparhandy TV 2 HD
63	Channel21 HD
64	QVC Style HD
66	SES UHD Demo Channel
67	Test 1
68	Test 2
69	tagesschau24 HD
70	ONE HD
71	SR Fernsehen HD
72	TV Record SD
73	Cordoba TV
74	TELESUR
75	TBN Espana
6	TVGA
77	I24 Francis
79	Fashion 4K
80	CANAL SUR A.
82	TV TRWAM
83	Radio Maryja
84	BVN TV

85	BBC World News Europe HD
86	NHK WORLD-JPN
87	Al Jazeera English HD
88	MB LIVE
89	Volksmusik
90	Bibel TV HD
91	Schau TV HD
92	Starparadies AT
93	HOPE Channel HD
94	RTLplus Austria
95	Service 13231
96	Service 13232
97	Service 13233
98	flimmit Zusatzpaket
99	Aristo.TV
100	R9 Oesterreich HD
101	SCHWEIZ 5
102	QS24
103	gotv neu
104	Melodie TV NEU
105	RAI News 24
106	Deutschland Vozrozhdenie
107	QVC UHD
108	ServusTV HD Deutschland
109	3sat HD
110	KiKA HD
111	ZDFinfo HD
112	ZDF HD

PREMIUM APARTMENTS
KECSKEMÉT

113	zdf_neo HD
114	TELESUR HD
115	RT HD
116	RT Esp HD
117	RT France HD
118	EXTREMADURA SAT
119	RT Esp HD
120	RTL 2 CH
121	SES 01
122	SES 02
124	SES 04
125	SES 06
126	SES 07
127	SES 08
128	SES 09
129	SES 10
132	Die Neue Zeit TV
137	Das Erste HD
138	arte HD
139	SWR BW HD
140	SWR RP HD
141	Cubavision Internacional
142	Al Jazeera Channel
143	Arirang TV
144	RT Esp
145	Russia Today
146	France 24 (en Français)
147	France 24 (in English)
148	France 24 (in Arabic)
149	CGTN Documentary
150	CGTN F
151	CGTN
152	TV5MONDE EUROPE
153	TRT World HD
154	BR Fernsehen Süd HD
155	BR Fernsehen Nord HD
156	NDR FS NDS HD
157	NDR FS MV HD
158	NDR FS HH HD
159	NDR FS SH HD
160	PHOENIX HD
161	CNBC Europe
162	Bloomberg Europe TV
163	Sonlife Broadcasting Network
164	Algerie 3
165	Canal Algerie
166	VR demo
167	TRT Turk
168	TSR Turkce
169	Russkij Perwyj R1
170	YOL TV
171	TVRUS
172	TVE INTERNACIONAL EUROPA
173	CANAL 24 HORAS
174	RNE RADIO 1
175	RNE RADIO 3
176	RNE RADIO 4
177	RNE RADIO 5 TODO NOTICIAS
178	RNE RADIO CLASICA
179	RNE RADIO EXTERIOR DE ESPAÑA
180	CNN Int.
181	DW (English)
182	Al Jazeera English
184	SAT.1 Gold Österreich
185	Pro7 MAXX Austria
186	kabel1 Doku austria
188	ARAGON TV INT
189	Das Erste
190	BR Fernsehen Süd
191	hr-fernsehen
192	BR Fernsehen Nord
193	WDR Köln
194	SWR Fernsehen BW
95	M6 BOUTIQUE
196	UHD1 by ASTRA / HD+
198	BFM TV
199	BFM BUSINESS
200	Sky Sport News HD
201	3sat
202	Dlf Kultur
203	Dlf
204	KiKA
205	ZDF
206	zdf_neo
207	ZDFinfo
208	Dlf Nova
209	DRadio DokDeb
210	Comedy Central / VIVA
211	MTV
212	Nickelodeon
213	ProSieben Schweiz
214	ProSieben Austria
215	Kabel 1 Schweiz
216	Kabel 1 Austria
217	SAT.1 A
218	SAT.1 CH
219	SAT.1 HH/SH
220	SAT.1 NS/Bremen
221	SAT.1 RhlPf/Hessen
223	rbb Brandenburg
224	rbb Berlin
225	ARD-TEST-1
226	NDR FS MV
227	NDR FS HH
228	NDR FS NDS
229	NDR FS SH
230	MDR Sachsen
231	MDR S-Anhalt
232	MDR Thüringen
233	SWR Fernsehen RP
234	TV5 MONDE
235	N24 DOKU Austria
236	BB-MV Lokal-TV
238	Comedy Central/VIVA AT
239	NICKELODEON AT
240	Sky Sport News
241	DELUXE MUSIC
242	Immer etwas Neues TV
243	MediaShop- Meine Einkaufswelt
244	StarParadies
245	Channel21
246	pearl.tv Shop
248	DMAX Austria
249	GOD Channel
251	ROCK ANTENNE
252	ERF Plus
253	ERF Pop
254	Life Channel CH
255	sunshine live

256	ANTENNE BAYERN
257	RTL Television
258	RTL2
259	SUPER RTL
260	VOX
261	n-tv
262	RTLplus
263	NITRO
264	RTL HB NDS
265	RTL Regional NRW
266	RTL FS
267	TOGGO plus
268	RTL HH SH
269	LCI
270	Sky Select
271	CNEWS
272	LCP
273	RTL Austria
274	VOX Austria
275	RTL2 Austria
276	SUPER RTL A
277	Eurosport 1 Deutschland
278	HSE24 EXTRA
279	EURONEWS FRENCH SD
280	VOX CH
281	RTL CH
282	EURONEWS GERMAN SD
283	Bayern 1
284	Bayern 2
285	BAYERN 3
286	BR-KLASSIK
287	B5 aktuell
288	BAYERN plus
289	PULS
290	BR Heimat
291	B5 plus
292	hr1
293	hr2
294	hr3
295	hr4
296	YOU FM
297	hr-iNFO
298	MDR SACHSEN
299	MDR S-ANHALT

300	MDR THÜRINGEN
301	MDR KULTUR
302	MDR JUMP
303	MDR SPUTNIK
304	MDR AKTUELL
305	MDR KLASSIK
306	NDR 2
307	NDR Kultur
308	NDR Info
309	N-JOY
310	NDR 90,3
311	NDR1WelleNord
312	NDR 1 Radio MV
313	NDR 1 Nieders.
314	NDR Info Spez.
315	NDR Blue
316	NDR Plus
317	Bremen Eins
318	Bremen Zwei
319	Bremen Vier
320	Inforadio
321	Kulturradio
322	Antenne Brandenburg
323	radioBERLIN 88,8
324	radioeins
325	Fritz
326	SR 1 Europawelle
327	SR 2 KulturRadio
328	SR 3 Saarlandwelle
329	SWR1 BW
330	SWR1 RP
331	SWR2
332	SWR3
333	SWR4 BW
334	SWR4 RP
335	DASDING
336	SWR Aktuell
337	1LIVE
338	WDR 2
339	WDR 3
340	WDR 4
341	WDR 5
342	COSMO
343	1LIVE diGGi
344	KIRAKA
345	WDR Event

346	SR Fernsehen
347	ARD-alpha
348	PEARL TV 4K UHD
349	AUDIO PRIMO
350	SUD RADIO
351	MC DOUALIYA
352	BFM BUSINESS
353	RADIOS 1
355	MOSAIQUE RADIOS
356	FUN RADIO
357	BBCW SERVICE
358	BBC ARABIC
359	MOUV'
360	FRANCE MUSIQUE
361	FIP
362	FRANCE INFO
363	FRANCE INTER
364	FRANCE CULTURE
365	FRANCE BLEU
366	RFI INTERNAT
367	RADIO CLASSIQUE
368	RTL
369	EUROPE 1
370	RMC
371	RIRE & CHANSONS
372	TSF JAZZ
373	OUI FM
374	JAZZ RADIO
375	NOVA
376	RADIO FG
377	CONTACT FM
378	NOSTALGIE
379	NRJ
380	RFM
381	VIRGIN RADIO
382	CHERIE FM
383	RTL2
384	SKYROCK
385	RADIO NOTRE DAME
386	RADIO ALFA
387	BEUR FM
388	WDR Bielefeld
389	WDR Dortmund
390	WDR Düsseldorf
391	WDR Essen
392	WDR Münster

393	WDR Siegen
394	WDR HD Köln
395	WDR HD Bielefeld
396	WDR HD Dortmund
397	WDR HD Düsseldorf
398	WDR HD Essen
399	WDR HD Münster
400	WDR HD Siegen
401	Radio Bremen TV
402	WDR Test A
403	EWTN katholisches TV
404	Sparhandy TV
405	1-2-3.tv
406	Disney Channel
407	TLC
408	Nicer Dicer TV
409	SIXX
410	ANIXE SD
411	QVC
412	QVC Style
413	N24 DOKU
415	egoFM
416	Klassik Radio
419	JAM FM
421	Sonnenklar TV
422	MediaShop-Neuheiten
423	meinTVshop
424	AstroTV
425	e8 television
426	REGIO TV
427	SPORT1
428	HSE24
429	HSE24 TREND
430	TELE 5
431	DMAX
432	VRT Radio1
433	VRT Radio2
434	Radio Lebensquelle
435	Radio Freundes-Dienst
436	SAT.1
437	ProSieben
438	kabel eins
439	WELT
440	SAT.1 Gold
441	Pro7 MAXX
442	SAT.1 Bayern
443	SAT.1 NRW
444	kabel eins Doku
445	QVC2
446	QVC Deutschland
447	Bibel TV
448	sonnenklar.TV HD
449	Juwelo HD
450	pearl.tv HD Shop
451	.
452	.
453	WDR Aachen
454	WDR Wuppertal
455	WDR Bonn
456	WDR Duisburg
457	WDR HD Aachen
458	WDR HD Wuppertal
459	WDR HD Bonn
460	WDR HD Duisburg
461	Radio neue Hoffnung
462	RTL RADIO
463	Radio Horeb
464	Sky News Intl
465	health.tv
466	K-TV
467	Deutsches Musik Fernsehen
468	nice temp
469	GayBoys LIVE
470	rhein main tv
471	Deutsche Girls 24 TV
472	JuweloTV
473	Dreamgirls24 TV
474	Erotiksat24 TV
475	Achtung Sexy TV temp
476	MB SAT - Test1
477	Maennersache TV
478	DateLine
479	Fotohandy
480	Mobile Sex
481	SEX-Kontakte
482	Eros TV
483	Achtung Sexy TV
484	Traumfrauen TV
485	Heiss und Sexy TV
486	Shop24Direct
487	nice
488	Babestation24
489	freenet Shopping
490	EROTIKA TV - NEU!
491	BunnyClub24
492	Clipmobile
493	Inselradio
494	ffn
495	Radio Paloma
496	Radio HBR
497	Radio Gloria
498	HIT RADIO FFH
499	planet radio
500	harmony.fm
501	Radio Regenbogen
502	MB SAT - Test7
503	ALT Sendersuchlauf starten!!
504	Radio HCJB
505	radioB2 SCHLAGER
506	freenet TV connect
507	SCHLAGERPARADIES
508	MB SAT - Test2
509	MB SAT - Test6
510	MB SAT - Test4
511	MB SAT - Test5
512	RTL NITRO A
513	Welt der Wunder
514	LT1-OOE
515	sixx Austria
516	VISIT-X.tv
517	ServusTV Deutschland
518	4MEDIATHEK
519	L-TV
520	OE1
521	OE1 DD
522	OE2 W
523	OE2 N
524	OE2 B
525	OE2 O
526	OE2 S
527	OE2 T
528	OE2 V
529	OE2 St
530	OE2 K

531	OE3
532	FM4
533	U1 Tirol
534	RADIO MARIA
535	BTV
536	HITRADIO OE3
537	ORF2E
538	Mei Musi TV
539	Folx TV
540	RiC
541	n-tv Austria
542	Sparhandy TV 2
10000	Kathrein DVB SSU
10001	STB Sony Spain
10002	FP URMET
10003	KaCTFL
10004	STB Ten Haaft
10005	STB Panasonic
10006	Datendienst T1M

10007	SGI_1111
10008	STB Telestar
10009	IDS DOWNLOAD SVC
10010	Humax ESD 160S
10011	Sky service config
10012	Humax ESD 160S BL2
10013	Strong OTA SRT 7505
10014	Service 6350
10015	DATASYSTEM
10016	DATASYSTEM
10017	KaCTFL
10018	Pace DS 830 NP
10019	Humax PR-HD3000C
10020	Pace TDC 866 NSDX
10021	Humax ESD 160C
10022	Humax ESD 160C BL2
10023	BData3
10024	ARD-Data-1
10025	DATA SYSTEM 94

10026	Pace TDS 865 NSD
10027	Pace TDS 865 NSDX
10028	Pace TDS 866 NSD
10029	Pace TDS 866 NSDX
10030	Humax PR-HD3000S
10031	M7 SAT901
10032	M7 Zenterio
10033	Nagra DL DSR7121
10034	M7 DL DSR7121
10035	M7 DL DSR8121
10036	Nagra DL DSR8121
10037	M7 DL DSR7141
10038	Nagra DL DSR7141
10039	M7 DL DSR8141
10040	Nagra DL DSR8141
10041	M7 SAT801
10042	RAPS
10043	MB SAT - Test3

PREMIUM APARTMENTS
KECSKEMÉT

6. Function and Control

6.1 Remote Controller Introduction

1. ON/OFF button
2. MODE button
3. FAN button
4. SWING button
5. TURBO button
6. ▲/ ▼button
7. SLEEP button
8. TEMP button
9. I FEEL button
10. LIGHT button
11. CLOCK button
12. TIMER ON / TIMER OFF button

Introduction for icons on display screen

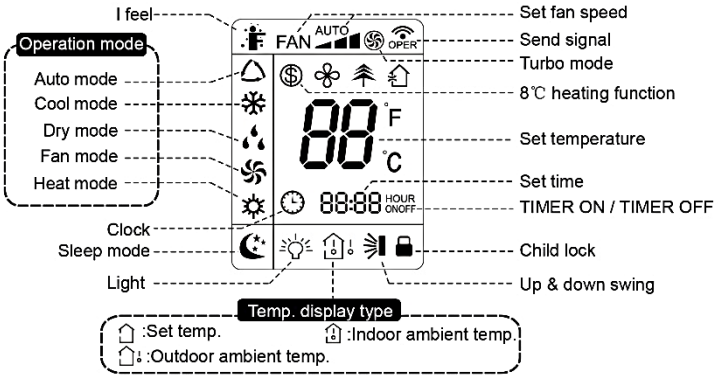

Introduction for buttons on remote controller

Note:

- After putting through the power, the air conditioner will give out a sound. Operation indictor " ⏻ " is ON (red indicator). After that, you can operate the air conditioner by using remote controller.
- Under ON status, pressing the button on the remote controller, the signal icon " ((•)) "on the display of remote controller will blink once and the air conditioner will give out a "de" sound, which means the signal has been sent to the air conditioner.
- Under OFF status, set temperature and clock icon will be displayed on the display of remote controller (If timer ON, timer OFF and light functions are set, the corresponding icons will be displayed on the display of remote controller at the same time); Under ON status, the display will show the corresponding set function icons.

1. ON/OFF button

Press this button can turn on or turn off the air conditioner. After turning on the air conditioner, operation indicator " ⏻ "on indoor unit's display is ON (green indicator. The colour is different for different models), and indoor unit will give out a sound.

2. MODE button

Press this button to select your required operation mode.



- When selecting auto mode, air conditioner will operate automatically according to factory setting. Set temperature can't be adjusted and will not be displayed as well. Press "FAN" button can adjust fan speed. Press "SWING" button can adjust fan blowing angle.
- After selecting cool mode, air conditioner will operate under cool mode. Cool indicator " ❄ "on indoor unit is ON. Press "▲" or " ▼ " button to adjust set temperature. Press "FAN" button to adjust fan speed. Press "SWING" button to adjust fan blowing angle.
- When selecting dry mode, the air conditioner operates at low speed under dry mode. Dry indicator " 💧 " on indoor unit is ON. Under dry mode, fan speed can't be adjusted. Press "SWING" button to adjust fan blowing angle.
- When selecting fan mode, the air conditioner will only blow fan, no cooling and no heating. All indicators are OFF. Press "FAN" button to adjust fan speed. Press "SWING" button to adjust fan blowing angle.
- When selecting heating mode, the air conditioner operates under heat mode. Heat indicator " ☼ " on indoor unit is ON. Press "▲" or " ▼ " button to adjust set temperature. Press "FAN" button to adjust fan speed. Press "SWING" button to adjust fan blowing angle. (Cooling only unit won't receive heating mode signal. If setting heat mode with remote controller, press ON/OFF button can't start up the unit).

Note:

- For preventing cold air, after starting up heating mode, indoor unit will delay 1~5 minutes to blow air (actual delay time is depend on indoor ambient temperature).
- Set temperature range from remote controller: 16~30℃ (60.8~86.0°F); Fan speed: auto, low speed, medium speed, high speed.

3. FAN button

Pressing this button can set fan speed circularly as: auto (AUTO), low(◢) ,medium(◢◢), high(◢◢▮).



Caution:

- Under AUTO speed, air conditioner will select proper fan speed automatically according to factory setting.
- Fan speed under dry mode is low speed.

4. SWING button

Press this button can select up&down swing angle. Fan blow angle can be selected circularly as below:



(horizontal louvers stops at current position)

- When selecting " ▮ ", air conditioner is blowing fan automatically. Horizontal louver will automatically swing up & down at maximum angle.
- When selecting " ▮ ", air conditioner is blowing fan at fixed position. Horizontal louver will stop at the fixed position.
- When selecting " ▮ ", air conditioner is blowing fan at fixed angle. Horizontal louver will send air at the fixed angle.
- Hold " ▮ "button above 2s to set your required swing angle. When reaching your required angle, release the button.

Note:

- " ▮ " may not be available. When air conditioner receives this signal, the air conditioner will blow fan automatically.

5. TURBO button

Under COOL or HEAT mode, press this button to turn to quick COOL or quick HEAT mode. " ֍ " icon is displayed on remote controller. Press this button again to exit turbo function and " ֍ " icon will disappear.

6. ▲/▼ button

- Press "▲" or "▼" button once increase or decrease set temperature 1°C(1°F). Holding "▲" or "▼" button, 2s later, set temperature on remote controller will change quickly. On releasing button after setting is finished, temperature indicator on indoor unit will change accordingly. (Temperature can't be adjusted under auto mode)
- When setting TIMER ON, TIMER OFF or CLOCK, press "▲" or "▲" button to adjust time. (Refer to CLOCK, TIMER ON, TIMER OFF buttons) When setting TIMER ON, TIMER OFF or CLOCK, press "▲" or "▲" button to adjust time. (Refer to CLOCK, TIMER ON, TIMER OFF buttons)

7. SLEEP button

Under COOL, HEAT or DRY mode, press this button to start up sleep function. " " icon is displayed on remote controller. Press this button again to cancel sleep function and " " icon will disappear.

8. TEMP button

By pressing this button, you can see indoor set temperature, indoor ambient temperature or outdoor ambient temperature on indoor unit's display. The setting on remote controller is selected circularly as below:



- When selecting " " or no display with remote controller, temperature indicator on indoor unit displays set temperature.
- When selecting " " with remote controller, temperature indicator on indoor unit displays indoor ambient temperature.
- When selecting " " with remote controller, temperature indicator on indoor unit displays outdoor ambient temperature.

Note:

- Outdoor temperature display is not available for some models. At that time, indoor unit receives " "signal, while it displays indoor set temperature.
- It's defaulted to display set temperature when turning on the unit.There is no display in the remote controller.
- Only for the models whose indoor unit has dual-8 display.
- When selecting displaying of indoor or outdoor ambient temperature, indoor temperature indicator displays corresponding temperature and automatically turn to display set temperature after three or five seconds.

9. I FEEL button

Press this button to start I FEEL function and " " will be displayed on the remote controller. After this function is set, the remote controller will send the detected ambient temperature to the controller and the unit will automatically adjust the indoor temperature according to the detected temperature. Press this button again to close I FEEL function and " " will disappear.

- Please put the remote controller near user when this function is set. Do not put the remote controller near the object of high temperature or low temperature in order to avoid detecting inaccurate ambient temperature.

10. LIGHT button

Press this button to turn off display light on indoor unit. " " icon on remote controller disappears. Press this button again to turn on display light. " " icon is displayed.

11. CLOCK button

Press this button to set clock time. " " icon on remote controller will blink. Press "▲" or "▼" button within 5s to set clock time. Each pressing of "▲" or "▼" button, clock time will increase or decrease 1 minute. If hold "▲" or "▼" button, 2s later, time will change quickly. Release this button when reaching your required time. Press "CLOCK" button to confirm the time. " " icon stops blinking.

Note:

- Clock time adopts 24-hour mode.
- The interval between two operation can't exceeds 5s. Otherwise, remote controller will quit setting status. Operation for TIMER ON/TIMER OFF is the same.

12. TIMER ON / TIMER OFF button

- TIMER ON button

  "TIMER ON" button can set the time for timer on. After pressing this button, " " icon disappears and the word "ON" on remote controller blinks. Press "▲" or "▼"button to adjust TIMER ON setting. After each pressing "▲" or "▼" button, TIMER ON setting will increase or decrease 1min. Hold "▲" or "▼" button, 2s later, the time will change quickly until reaching your required time. Press "TIMER ON" to confirm it. The word "ON" will stop blinking. " " icon resumes displaying. Cancel TIMER ON: Under the condition that TIMER ON is started up, press "TIMER ON" button to cancel it.
- TIMER OFF button

  "TIMER OFF" button can set the time for timer off. After pressing this button," " icon disappears and the word "OFF" on remote controller blinks. Press "▲" or "▼" button to adjust TIMER OFF setting. After each pressing "▲" or "▼" button,
  TIMER OFF setting will increase or decrease 1min. Hold "▲" or "▼" button, 2s later, the time will change quickly until reaching your required time. Press "TIMER OFF" word "OFF" will stop blinking. " " icon resumes displaying. Cancel TIMER OFF. Under the condition that TIMER OFF is started up, press "TIMER OFF" button to cancel it.

Note:

- Under on and off status, you can set TIMER OFF or TIMER ON simultaneously.
- Before setting TIMER ON or TIMER OFF, please adjust the clock time.
- After starting up TIMER ON or TIMER OFF, set the constant circulating valid. After that, air conditioner will be turned on or turned off according to setting time. ON/OFF button has no effect on setting. If you don't need this function, please use remote controller to cancel it.

Function introduction for combination buttons

1. Energy-saving function

Under cooling mode, press "TEMP" and " CLOCK" buttons simultaneously to start up or turn off energy-saving function. When energy-saving function is started up, "SE" will be shown on remote controller, and air conditioner will adjust the set temperature automatically according to factory setting to reach to the best energy-saving effect. Press "TEMP" and "CLOCK"buttons simultaneously again to exit energy-saving function.

Note:

- Under energy-saving function, fan speed is defaulted at auto speed and it can't be adjusted.
- Under energy-saving function, set temperature can't be adjusted. Press "TURBO" button and the remote controller won't send signal.
- Sleep function and energy-saving function can't operate at the same time. If energy-saving function has been set under cooling mode, press sleep button will cancel energy-saving function. If sleep function has been set under cooling mode, start up the energy-saving function will cancel sleep function.

2. 8 ℃ heating function

Under heating mode, press "TEMP" and "CLOCK" buttons simultaneously to start up or turn off 8℃ heating function. When this function is started up, " ⓢ " and "8℃ " will be shown on remote controller, and the air conditioner keep the heating status at 8℃ . Press "TEMP" and "CLOCK" buttons simultaneously again to exit 8℃ heating function.

Note:

- Under 8℃ heating function, fan speed is defaulted at auto speed and it can't be adjusted.
- Under 8℃ heating function, set temperature can't be adjusted. Press "TURBO" button and the remote controller won't send signal.
- Sleep function and 8℃ heating function can't operate at the same time. If 8℃ heating function has been set under cooling mode, press sleep button will cancel 8℃ heating function. If sleep function has been set under cooling mode, start up the 8℃ heating function will cancel sleep function.
- Under ℉ temperature display, the remote controller will display 46 ℉ heating.

3. Child lock function

Press "▲" and "▼" simultaneously to turn on or turn off child lock function. When child lock function is on, " 🔒 " icon is displayed on remote controller. If you operate the remote controller, the " 🔒 " icon will blink three times without sending signal to the unit.

4. Temperature display switchover function

Under OFF status, press "▼" and "MODE" buttons simultaneously to switch temperature display between ℃ and ℉ .

Operation guide

1. After putting through the power, press "ON/OFF" button on remote controller to turn on the air conditioner.
2. Press "MODE" button to select your required mode: AUTO, COOL, DRY, FAN, HEAT.
3. Press "▲" or "▼" button to set your required temperature. (Temperature can't be adjusted under auto mode).
4. Press "FAN" button to set your required fan speed: auto, low, medium and high speed.
5. Press "SWING" button to select fan blowing angle.

Replacement of batteries in remote controller

1. Press the back side of remote controller marked with " ▤ OPEN ", as shown in the fig, and then push out the cover of battery box along the arrow direction.
2. Replace two 7# (AAA 1.5V) dry batteries, and make sure the position of "+" polar and "-" polar are correct.
3. Reinstall the cover of battery box.

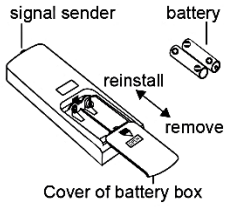

Note:

- During operation, point the remote control signal sender at the receiving window on indoor unit.
- The distance between signal sender and receiving window should be no more than 8m, and there should be no obstacles between them.
- Signal may be interfered easily in the room where there is fluorescent lamp or wireless telephone; remote controller should be close to indoor unit during operation.
- Replace new batteries of the same model when replacement is required.
- When you don't use remote controller for a long time, please take out the batteries.
- If the display on remote controller is fuzzy or there's no display, please replace batteries.

6.2 Brief Description of Modes and Functions

● Indoor Unit

1.Basic function of system

(1)Cooling mode

(1) Under this mode, fan and swing operates at setting status. Temperature setting range is 60.8~86.0°F.

(2) During malfunction of outdoor unit or the unit is stopped because of protection, indoor unit keeps original operation status.

(2)Drying mode

(1) Under this mode, fan operates at low speed and swing operates at setting status. Temperature setting range is 60.8~86.0°F.

(2) During malfunction of outdoor unit or the unit is stopped because of protection, indoor unit keeps original operation status.

(3) Protection status is same as that under cooling mode.

(4) Sleep function is not available for drying mode.

(3)Heating mode

(1) Under this mode, Temperature setting range is 60.8~86.0°F.

(2) Working condition and process for heating mode:

When turn on the unit under heating mode, indoor unit enters into cold air prevention status. When the unit is stopped or at OFF status, and indoor unit has been started up just now, the unit enters into residual heat-blowing status.

(4)Working method for AUTO mode:

1.Working condition and process for AUTO mode:

a.Under AUTO mode, standard heating Tpreset=68.0°F and standard cooling Tpreset=77.0°F. The unit will switch mode automatically according to ambient temperature.

2.Protection function

a. During cooling operation, protection function is same as that under cooling mode.

b. During heating operation, protection function is same as that under heating mode.

3. Display: Set temperature is the set value under each condition. Ambient temperature is (Tamb.-Tcompensation) for heat pump unit and Tamb. for cooling only unit.

4. If there's I feel function, Tcompensation is 0. Others are same as above.

(5)Fan mode

Under this mode, indoor fan operates at set fan speed. Compressor, outdoor fan, 4-way valve and electric heating tube stop operation. Indoor fan can select to operate at high, medium, low or auto fan speed. Temperature setting range is 60.8~86.0°F.

2. Other control

(1) Buzzer

Upon energization or availably operating the unit or remote controller, the buzzer will give out a beep.

(2) Auto button

If press this auto button when turning off the unit, the complete unit will operate at auto mode. Indoor fan operates at auto fan speed and swing function is turned on. Press this auto button at ON status to turn off the unit.

(3) Auto fan

Heating mode: During auto heating mode or normal heating ode, auto fan speed will adjust the fan speed automatically according to ambient temperature and set temperature.

(4) Sleep

After setting sleep function for a period of time, system will adjust set temperature automatically.

(5) Timer function:

General timer and clock timer functions are compatible by equipping remote controller with different functions.

(6) Memory function

memorize compensation temperature, off-peak energization value.

Memory content: mode, up&down swing, light, set temperature, set fan speed, general timer (clock timer can't be memorized).

After power recovery, the unit will be turned on automatically according to memory content.

(7) Health function

During operation of indoor fan, set health function by remote controller. Turn off the unit will also turn off health function.

Turn on the unit by pressing auto button, and the health is defaulted ON.

(8)I feel control mode

After controller received I feel control signal and ambient temperature sent by remote controller, controller will work according to the ambient temperature sent by remote controller.

(9)Compulsory defrosting function

(1) Start up compulsory defrosting function

Under ON status, set heating mode with remote controller and adjust the temperature to 60.8°F. Press "+, -, +, -, +,-" button successively within 5s and the complete unit will enter into compulsory defrosting status. Meanwhile, heating indicator on indoor unit will ON 10s and OFF 0.5s successively. (Note: If complete unit has malfunction or stops operation due to protection, compulsory defrosting function can be started up after malfunction or protection is resumed.

(2) Exit compulsory defrosting mode

After compulsory defrosting is started up, the complete unit will exit defrosting operation according to the actual defrosting result, and the complete unit will resume normal heating operation.

(10)Refrigerant recovery function:

(1) Enter refrigerant recycling function

Within 5min after energizing (unit ON or OFF status is ok), continuously press LIGHT button for 3 times within 3s to enter refrigerant recycling mode; Fo is displayed and refrigerant recycling function is started. At this moment, the maintenance people closes liquid valve. After 5min, stick the thimble of maintenance valve with a tool. If there is no refrigerant spraying out, close the gas valve immediately and then turn off the unit to remove the connection pipe.

(2) Exit refrigerant recycling function

After entering refrigerant recycling mode, when receive any remote control signal or enter refrigerant recycling mode for 25min, the unit will exit refrigerant recycling mode automatically If the unit is in standby mode before refrigerant recycling, it will be still in standby mode after finishing refrigerant recycling; if the unit is in ON status before refrigerant recycling, it will still run in original operation mode.

(11)Ambient temperature display control mode

1. When user set the remote controller to display set temperature (corresponding remote control code: 01), current set temperature will be displayed.

2. Only when remote control signal is switched to indoor ambient temperature display status (corresponding remote control code: 10) from other display status (corresponding remote control code: 00, 01,11),controller will display indoor ambient temperature for 3s and then turn back to display set temperature.

Under this mode, indoor fan operates at set fan speed. Compressor, outdoor fan, 4-way valve and electric heating tube stop operation. Indoor fan can select to operate at high, medium, low or auto fan speed. Temperature setting range is 60.8~86.0°F.

(12)Off-peak energization function:

Adjust compressor's minimum stop time. The original minimum stop time is 180s and then we change to:

The time interval between two start-ups of compressor can't be less than 180+T s($0 \le T \le 15$). T is the variable of controller. That's to say the minimum stop time of compressor is 180s~195s. Read-in T into memory chip when refurbish the memory chip each time. After power recovery, compressor can only be started up after 180+T s at least.

(13) SE control mode

The unit operates at SE status.

(14) X-fan mode

When X-fan function is turned on, after turn off the unit, indoor fan will still operate at low speed for 2min and then the complete unit will be turned off. When x-fan function is turned off, after turn off the unit, the complete unit will be turned off directly.

(15) 8° heating function

Under heating mode, you can set 8° heating function by remote controller. The system will operate at 8°set temperature.

(16) Turbo fan control function

Set turbo function under cooling or heating mode to enter into turbo fan speed. Press fan speed button to cancel turbo wind.

No turbo function under auto, dry or fan mode.

IV. HOT PLATE USER'S MANUAL

Product Overview

Top View

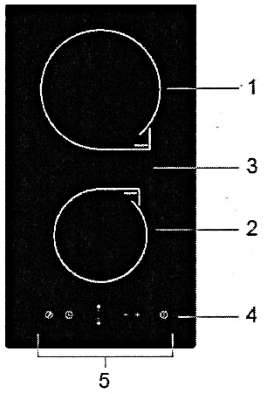

1. max. 2000 W zone
2. max. 1500 W zone
3. Glass plate
4. ON/OFF control
5. Control panel

Control Panel

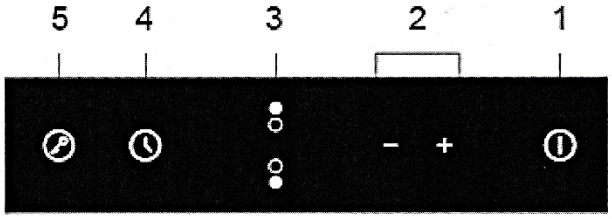

1. ON/OFF control
2. Power / Timer regulating controls
3. Heating zone selection controls
4. Timer control
5. keylock control

A Word on Induction Cooking

Induction cooking is a safe, advanced, efficient, and economical cooking technology. It works by electromagnetic vibrations generating heat directly in the pan, rather than indirectly through heating the glass surface. The glass becomes hot only because the pan eventually warms it up.

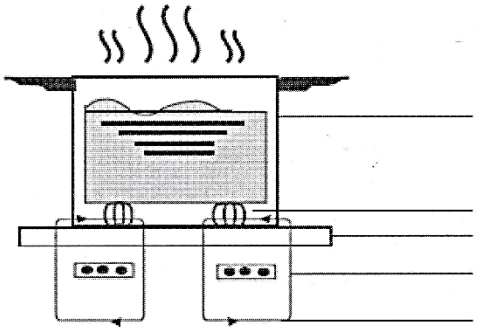

iron pot

magnetic circuit
ceramic glass plate
induction coil
induced currents

Before using your New Induction Hob

- Read this guide, taking special note of the 'Safety Warnings' section.
- Remove any protective film that may still be on your Induction hob.

Using the Touch Controls

- The controls respond to touch, so you don't need to apply any pressure.
- Use the ball of your finger, not its tip.
- You will hear a beep each time a touch is registered.
- Make sure the controls are always clean, dry, and that there is no object (e.g. a utensil or a cloth) covering them. Even a thin film of water may make the controls difficult to operate.

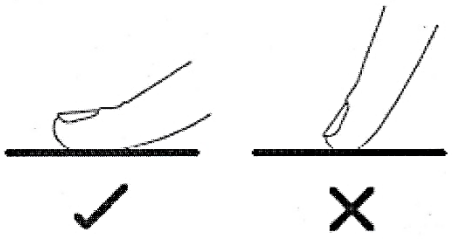

Choosing the right Cookware

- Only use cookware with a base suitable for induction cooking. Look for the induction symbol on the packaging or on the bottom of the pan.
- You can check whether your cookware is suitable by carrying out a magnet test. Move a magnet towards the base of the pan. If it is attracted, the pan is suitable for induction.

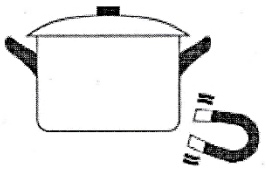

- If you do not have a magnet:

1. Put some water in the pan you want to check.
2. If U does not flash in the display and the water is heating, the pan is suitable.

- Cookware made from the following materials is not suitable: pure stainless steel, aluminium or copper without a magnetic base, glass, wood, porcelain, ceramic, and earthenware.

Do not use cookware with jagged edges or a curved base.

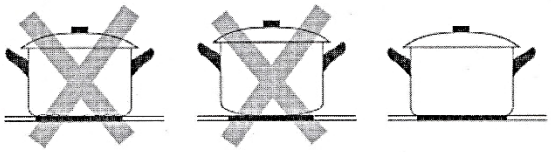

Make sure that the base of your pan is smooth, sits flat against the glass, and is the same size as the cooking zone. Use pans whose diameter is as large as the graphic of the zone selected. Using a pot a slightly wider energy will be used at its maximum efficiency. If you use smaller pot efficiency could be less than expected. Pot less than 140 mm could be undetected by the hob. Always centre your pan on the cooking zone.

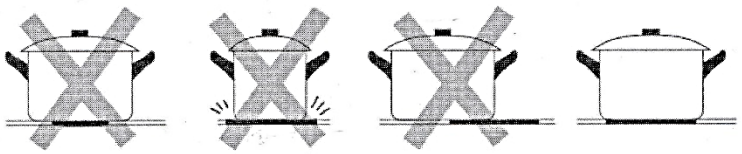

Always lift pans off the Induction hob – do not slide, or they may scratch the glass.

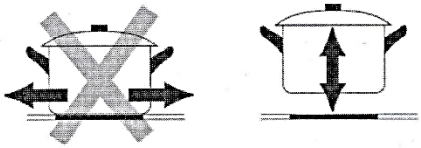

Using your Induction Hob

To start cooking

1. Touch the ON/OFF control.
   After power on, the buzzer beeps once, all displays show " – " or " – – ", indicating that the induction hob has entered the state of standby mode.

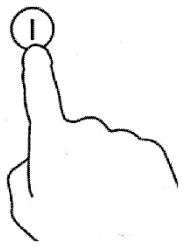

2. Place a suitable pan on the cooking zone that you wish to use.
   • Make sure the bottom of the pan and the surface of the cooking zone are clean and dry.

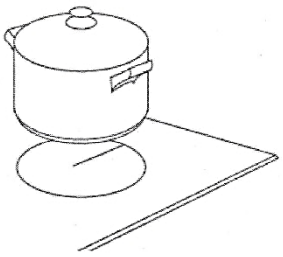

3. Touching the heating zone selection control ,and a indicator upon the key will flash.

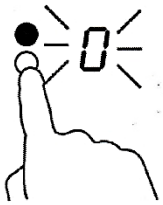

4. Select a heat setting by touching the "-" or "+" control.
   • If you don't choose a heat setting within 1 minute, the Induction hob will automatically switch off. You will need to start again at step 1.

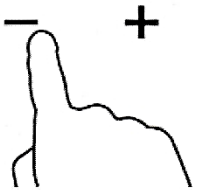

   • You can modify the heat setting at any time during cooking.

If the display flashes ≥U≤ alternately with the heat setting

This means that:

- you have not placed a pan on the correct cooking zone or,
- the pan you're using is not suitable for induction cooking or,
- the pan is too small or not properly centered on the cooking zone.

No heating takes place unless there is a suitable pan on the cooking zone. The display will automatically turn off after 2 minutes if no suitable pan is placed on it.

When you have finished cooking

1. Touching the heating zone selection control that you wish to switch off.

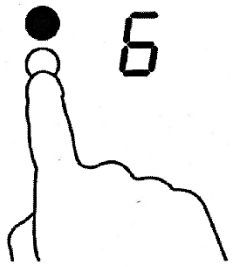

2. Turn the cooking zone off by scrolling down to" 0" or touching"-" and"+" control together. Make sure the display shows"0".

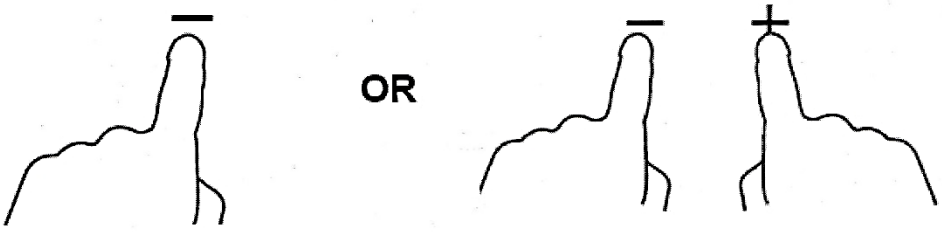

3. Turn the whole cooktop off by touching the ON/OFF control.

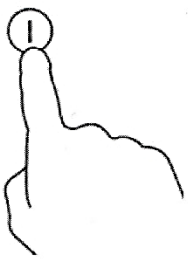

4. Beware of hot surfaces

   H will show which cooking zone is hot to touch. It will disappear when the surface has cooled down to a safe temperature. It can also be used as an energy saving function if you want to heat further pans, use the hotplate that is still hot.



Locking the Controls

- You can lock the controls to prevent unintended use (for example children accidentally turning the cooking zones on).
- When the controls are locked, all the controls except the ON/OFF control are disabled.

To lock the controls

Touch the keylock control. The timer indicator will show " Lo "

To unlock the controls

1. Touch and hold the keylock control for a while.
2. You can now start using your Induction hob.

When the hob is in the lock mode, all the controls are disable except the ON/OFF, you can always turn the induction hob off with the ON/OFF control in an emergency, but you shall unlock the hob first in the next operation.

Over-Temperature Protection

A temperature sensor equipped can monitor the temperature inside the Induction hob. When an excessive temperature is monitored, the Induction hob stops operation automatically.

Detection of Small Articles

When an unsuitable size or non-magnetic pan (e.g. aluminium), or some other small item (e.g. knife, fork, key) has been left on the hob, the zone automatically goes on to standby in 1 minute. The fan will keep cooling down the induction hob for a further 1 minute.

Auto Shutdown Protection

Auto shut down is a safety protection function for your induction hob. It shuts down automatically if ever you forget to turn off your cooking. The default working times for various power levels are shown in the below table:

Power level	1	2	3	4	5	6	7	8	9
Default working timer (hour)	8	8	8	4	4	4	2	2	2

When the pot is removed, the induction hob stops heating immediately and the hob automatically switch off after 2 minutes.

⚠ People with a heart pace maker should consult with their doctor before using this unit.

Using the Timer

You can use the timer in two different ways:

- You can use it as a minute minder. In this case, the timer will not turn any cooking zone off when the set time is up.
- You can set it to turn one cooking zone off after the set time is up.
- You can set the timer up to 99 minutes.

Using the Timer as a Minute Minder

If you are not selecting any cooking zone

1. Make sure the cooktop is turned on.
   Note: you can use the minute minder even if you're not selecting any cooking zone.

2. Touch timer control, the minder indicator starts flashing and "10" is shown on the timer display.

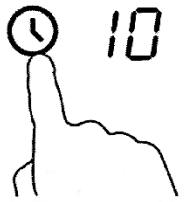

3. Set the time by touching the "-" or "+" control of the timer.

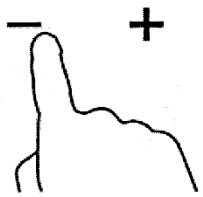

Hint: Touch the "-" or "+" control of the timer once to decrease or increase by 1 minute.

Hold the "-" or "+" control of the timer to decrease or increase by 10 minutes.

If the setting time exceeds 99 minutes, the timer will automatically return to 00 minute.

4. Touching the"-" and "+" together, the timer is cancelled, and the"00" will be shown on the minute display.

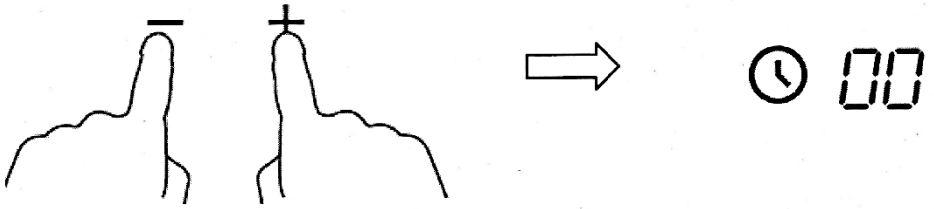

5. When the time is set, it starts to count down immediately. The display shows the remaining time and the timer indicator flashes for 5 seconds.



6. Buzzer bips for 30 seconds and the timer indicator shows "- - " when the setting time will be finished.



Setting the timer to turn one cooking zone off

1. Touch the heating zone selection control that you want to set the timer for.

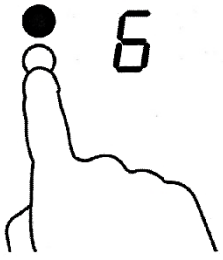

2. Touch timer control, the minder indicator starts flashing and "10" is shown in the timer display.

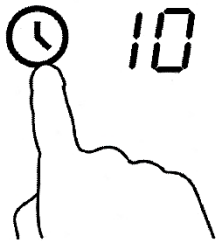

3. Set the time by touching the"-" or"+" control of the timer.

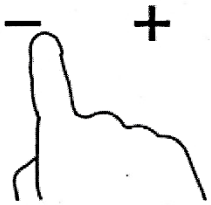

Hint: Touch either the "-" or "+" control of the timer once, time decreases or increases by 1 minute. Touch and hold either the "-" or "+" control of the timer, time decreases or increases by 10 minutes.

If the setting time exceeds 99 minutes, the timer will automatically return to 00 minute.

4. Touching the "-" and "+" together, the timer is cancelled, and the " 00" will be shown on the minute display.

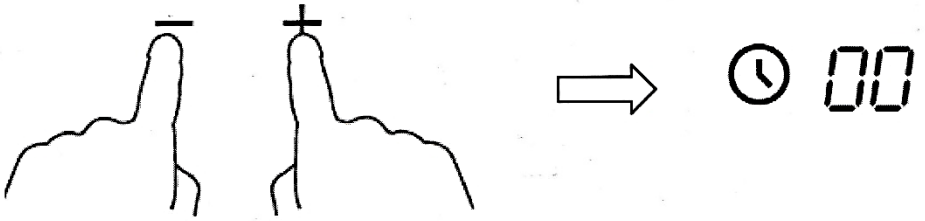

5. When the time is set, it will begin to count down immediately. The display will show the remaining time and the timer indicator will flash for 5 seconds.



NOTE: The red dot next to power level indicator lights up indicating that zone is selected.



6. When cooking timer expires, the corresponding cooking zone will be switched off automatically. --

Other cooking zone will keep operating if they are turned on previously.

Cooking Guidelines

Take care when frying as the oil and fat heat up very quickly, particularly if you're using PowerBoost. At extremely high termperatures oil and fat will ignite spontaneously and this presents a serious fire risk.

Cooking Tips

- When food comes to the boil, reduce the temperature setting.
- Using a lid will reduce cooking times and save energy by retaining the heat.
- Minimise the amount of liquid or fat to reduce cooking times.
- Start cooking on a high setting and reduce the setting when the food has heated through.

Simmering, cooking rice

- Simmering occurs below boiling point, at around 85°C, when bubbles are just rising occasionally to the surface of the cooking liquid. It is the key to delicious soups and tender stews because the flavours develop without overcooking the food. You should also cook egg-based and flourthickened sauces below boiling point.
- Some tasks, including cooking rice by the absorption method, may require a setting higher than the lowest setting to ensure the food is cooked properly in the time recommended.

Searing steak

To cook juicy flavoursome steaks:

1. Stand the meat at room temperature for about 20 minutes before cooking.
2. Heat up a heavy-based frying pan.
3. Brush both sides of the steak with oil. Drizzle a small amount of oil into the

hot pan and then lower the meat onto the hot pan.

4. Turn the steak only once during cooking. The exact cooking time will depend on the thickness of the steak and how cooked you want it. Times may vary from about 2 – 8 minutes per side. Press the steak to gauge how cooked it is – the firmer it feels the more 'well done' it will be.
5. Leave the steak to rest on a warm plate for a few minutes to allow it to relax and become tender before serving.

For stir-frying

1. Choose an induction compatible flat-based wok or a large frying pan.
2. Have all the ingredients and equipment ready. Stir-frying should be quick. If cooking large quantities, cook the food in several smaller batches.
3. Preheat the pan briefly and add two tablespoons of oil.
4. Cook any meat first, put it aside and keep warm.
5. Stir-fry the vegetables. When they are hot but still crisp, turn the cooking zone to a lower setting, return the meat to the pan and add your sauce.
6. Stir the ingredients gently to make sure they are heated through.
7. Serve immediately.

Heat Settings

The settings below are guidelines only. The exact setting will depend on several factors, including your cookware and the amount you are cooking. Experiment with the induction hob to find the settings that best suit you.

Heat setting	Suitability
1 - 2	• delicate warming for small amounts of food • melting chocolate, butter, and foods that burn quickly • gentle simmering • slow warming
3 - 4	• reheating • rapid simmering • cooking rice
5 - 6	• pancakes
7 - 8	• sautéing • cooking pasta
9	• stir-frying • searing • bringing soup to the boil • boiling water

V. RGB LED LIGHTS USER'S MANUAL

III. Function of Keys

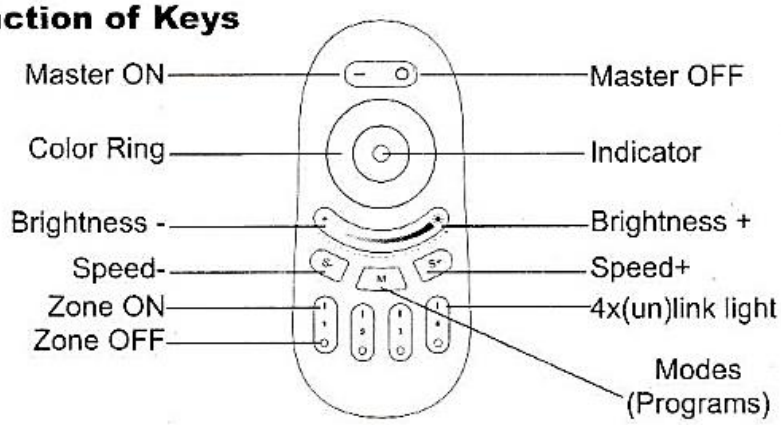

Program List

Programs:

Program 1 (RGBW Fade In Fade Out)
This program fades in and fades out the color red, green, blue and white one after another.

Program2(Color Flash)
In this program, red, green, blue, white yellow purple flashes to change.

Program 3 (Disco)
Different colors strobe and flash to change.

Program 4 (Red Color Ramp up and Flash)
In this program, red color brightens from 0%-100% and shuts down, then flashes three times.

Program 5 (Green Color Ramp up and Flash)
In this program, green color brightens from 0%-100% and shuts down, then flashes three times.

Program 6 (Blue Color Ramp up and Flash)
In this program, blue color brightens from 0%-100% and shuts down, then flashes three times.

Program 7(Color Change+ Flash)
Here several colors fade into each other and then flash randomly.

Program 8 (Fade in and Fade out)
Here different colors fade into each other.

Program 9 (Strobe White)
Just white color flashes up.

TIPS:
To dim all RGBW lights at once or change the color, first press ' Master ON'. To do this with individual lights, first press'Zone ON'. Secondly, choose the color or brightness according to the color ring or brightness ring.

For RGB led strip light, the white is mixed from Red, Green and Blue, so the white is not pure.
For RGBW led strip light, the white is pure white.

Linking new lights to the remote controls:
1. Choose which zone you want to assign the light(1 to 4)
2. Switch off the main power supply of the light in the selected zone with the main switch or pull the plug from the socket.
3. Now switch on the light again and within 3 seconds shortly press one of the 'Zone ON' buttons one time on the remote control.
4. When this link operation is successful, the light slowly blinks 3 times on and off.

Please don't forget to shut down all the lights in case of leaving the apartment. Thanks! ☺

VI. Spring-loaded roller shades user's manual

Spring-loaded roller shades can be stuck anywhere without hanging tabs.

To pull it down, simply drag it to the right height and set it where you like it. With the release, be careful not to roll all over its place.

To release, slightly pull down the roller, then slowly release it upwards, feeling the spring pulls it up. It's important not to let go of the roll until it surely one has stopped, or else it may be rolling all over, the spring will expire, which will not pull back the roll next time, unless it is splashed again.

After a few pulling up and down, you will definitely come in. Go for it! ☺

VII. Radiator thermostat user's manual

In Pál Villa, the central heating unit keeps the temperature at 23 ° C during the heating season (about 15 October to 15 April depending on the weather).

With the numbered thermostatic heads on the radiators, you can adjust it to warmer or less warm in the apartment. If you want less warm, turn the valve down towards 1, if you want warmer, turn the valve up towards 5.

If that's not enough, you can use the air condition to help with heating. If you back up a few pages, you will find the instruction manual for the AC.

If you still can not set a comfortable temperature in the room, please feel free to ask the receptionist, will definitely be your help.

When you leave the apartment don't forget to close all the windows.

Thank you! ☺

VIII. Useful phone numbers

Receptionist: +36 30 49 33 412

Ambulance: 107

Firefighters: 105

Police: 104

General emergency call: 112